

Wilо-IF-Modul PLR

Fig. 1

- Ⓧ Einbau- und Betriebsanleitung
- Ⓧ Installation and operating instructions
- Ⓧ Notice de montage et de mise en service
- Ⓧ Inbouw- en bedieningsvoorschriften
- Ⓧ Instrucciones de instalación y funcionamiento
- Ⓧ Istruzioni di montaggio, uso e manutenzione
- Ⓧ Asennus- ja käyttöohje
- Ⓧ Monterings- och skötselanvisning
- Ⓧ Beépítési és üzemeltetési utasítás
- Ⓧ Οδηγίες εγκατάστασης και λειτουργίας
- Ⓧ Návod k montáži a obsluze
- Ⓧ Instrukcja montażu i obsługi
- Ⓧ Инструкция по монтажу и эксплуатации
- Ⓧ Monterings- og driftsvejledning
- Ⓧ Montasje- og bruksanvisning



www.wilo.com/automation

Fig. 2

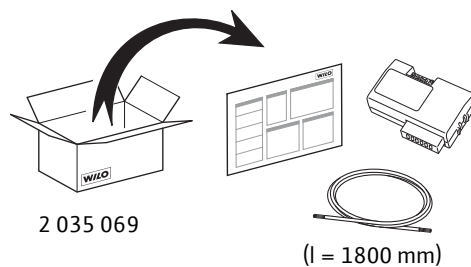
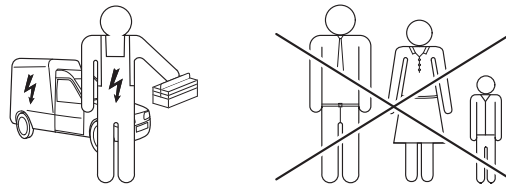


Fig. 3

- Wilо-VeroLine-IP-E
- Wilо-VeroTwin-DP-E
- Wilо-Economy MHIE
- Wilо-Multivert MVIE (1,1 - 4 kW)
- Wilо-Helix VE (1,1 - 4 kW)
- ...


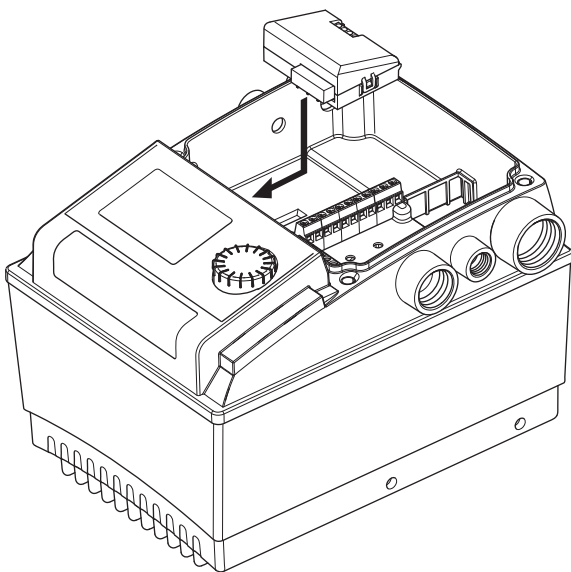


Fig. 4

- Wilо-CronoLine-IL-E
- Wilо-CronoTwin-DL-E
- Wilо-Multivert MVIE (5,5 - 7,5 kW)
- Wilо-Helix VE (5,5 - 7,5 kW)
- ...

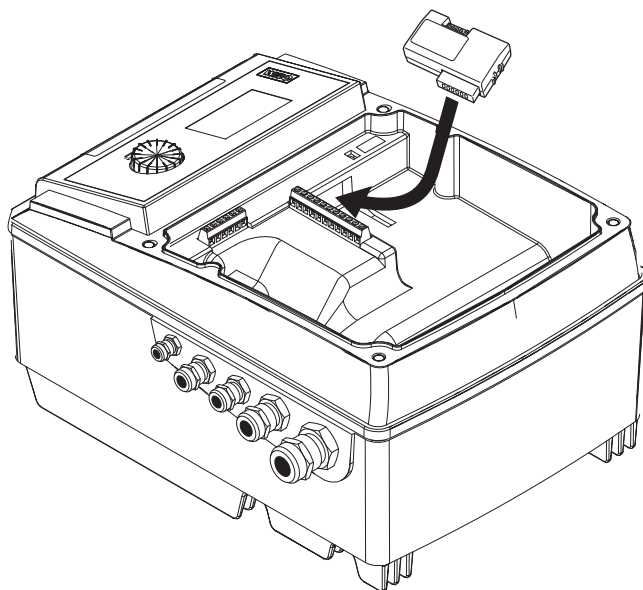

Wilo-IF-Modul PLR

Fig. 5

